



TACOMA™ 13'x9'

Instructions apply to Part Number 9277-139

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.
- See owners manual for more tips.

Part No. 9277-407

Main Tent Pole (Black)

Part No. 9277-406

Side Pole (Gray)

Part No. 9277-408

Rainfly Poles

Rainfly Part No. 9277-409


1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with doors facing desired directions. (illus. 1)
- Unzip doors.
- Stake down tent, using the rings on the stake loops. Keep the floor taut. (illus. 2)
- Assemble frame poles by interlocking shock-corded poles. (three poles)
- Insert the black main tent poles through the two pole sleeves (ea.) as shown below. The poles will run parallel. (illus. 1)
- Insert the longer gray side pole through the three pole sleeves running the opposite direction of the black poles. The gray pole should be on top of the black poles where they cross.

Assembled black main tent poles inserted through pole sleeves

Door

illus. 1

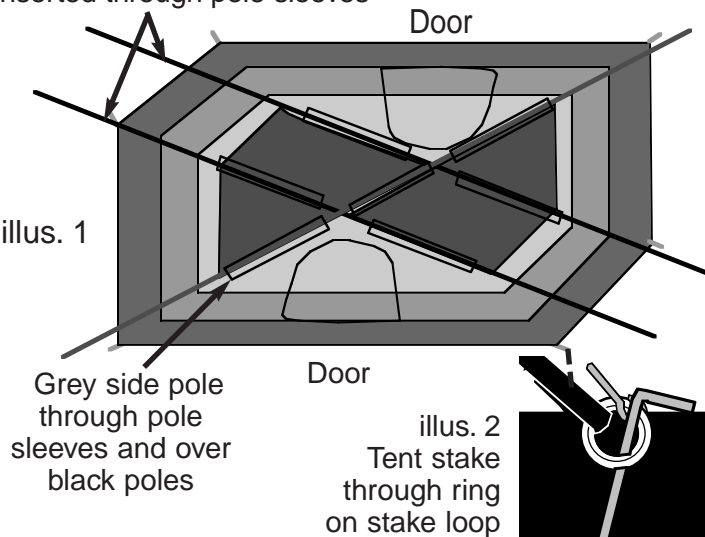

Grey side pole through pole sleeves and over black poles


Door

illus. 2
Tent stake through ring on stake loop


2 Connect Frame to Tent

- Insert one pin into the end of gray side tent pole at tent corner. (illus. 3, illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole end. (works best with two people)
- Choose either black pole and insert the pin into one end of the main tent pole and gradually apply pressure forming an arch until you can insert the pin in the other end.
- Repeat for second black main tent pole. (illus. 3, illus. 4)

Grommets for rainfly poles

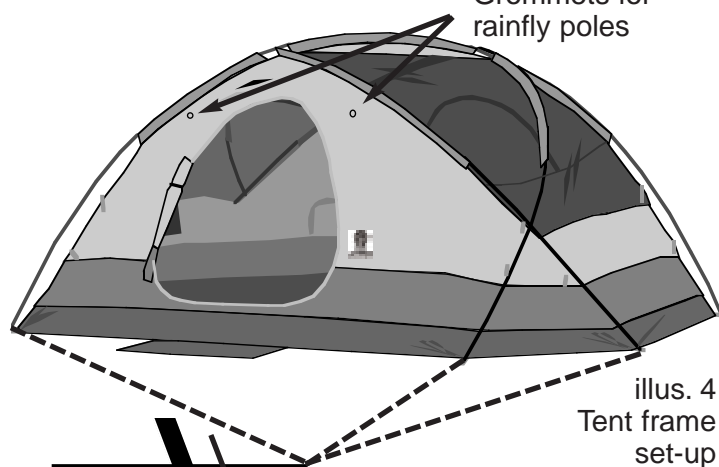

illus. 4
Tent frame set-up

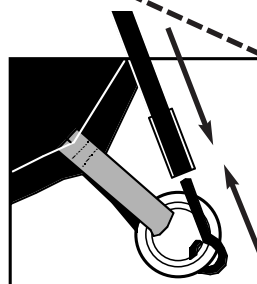

illus. 3
Insert pin into pole end

3 Attach Tent to Frame Using Frame Clips

- Attach frame clips along the edges of tent to frame poles. (illus. 5), (illus. 6)
- Make any adjustments to the tent corner stakes that are needed.

Grommets for rainfly pole



illus. 5
Frame clips


illus. 6
Assembled tent without rainfly.

4 Attach Rainfly

- Assemble rainfly poles by interlocking shock-corded pole.
- Insert rainfly poles through pole sleeves located at the center edges of the underside of rainfly. (illus. 7), (illus. 8)
- Drape rainfly over tent frame, pole side down. Rainfly poles should be over doors.
- Connect the six elastic loops with “S” hooks, (found at the rainfly corners) to the six rings located at the end of the stake loops at the corners of the tent.
- Insert the tips of the rainfly poles into the grommets on the front and rear of tent. (See above illus. 6)
- Secure rainfly with attachments located on underside of fly. (illus. 8)
- Stake out the tent with (2) side guylines and (4) corner guylines.


illus. 7 Insert rainfly pole piece into pocket on underside of rainfly

Rainfly pole through pole sleeves

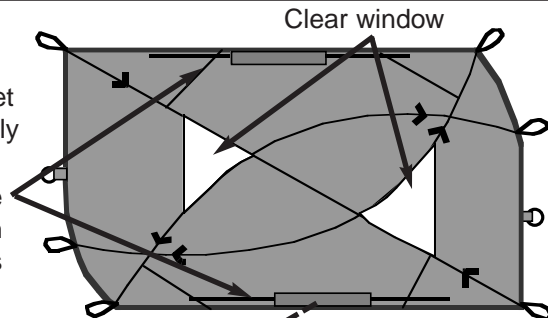

Rainfly pole in grommet

Corner guyline

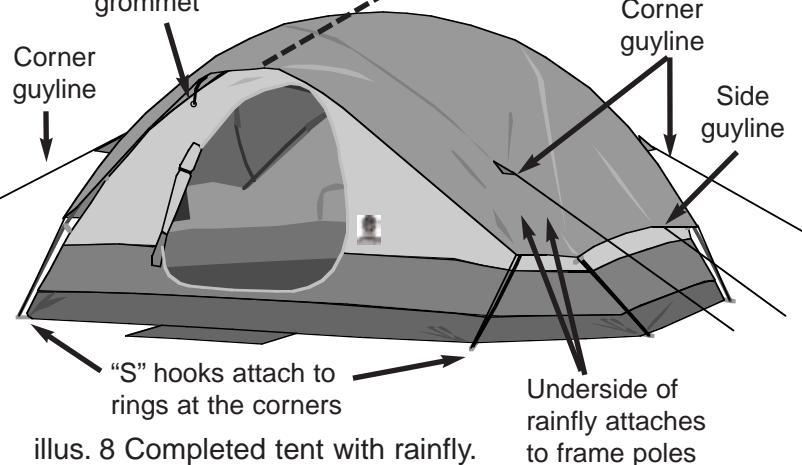

illus. 8 Completed tent with rainfly.

“S” hooks attach to rings at the corners
Underside of rainfly attaches to frame poles

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESKOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. We recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.
- See owners manual for more tips.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219

1-800-835-3278 • www.coleman.com

MADE IN CHINA